


FIMER

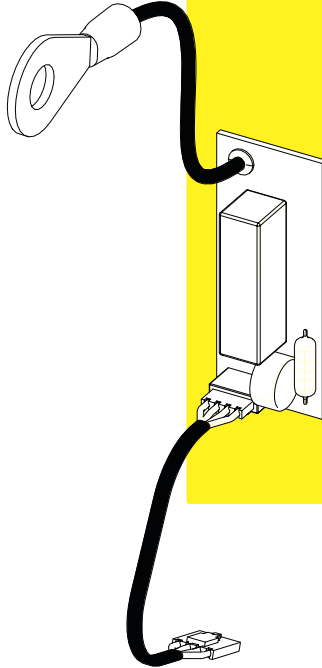

Solar Inverter PVS-50.0/60.0-GROUNDING KIT (For PVS-50/60-TL)


Quick Installation Guide

In addition to what is explained in this quick installation guide, the safety and installation information provided in the product manual must be read and followed. The technical documentation for the product is available at the website.
The device must be used in the manner described in the manual. If this is not the case the safety devices guaranteed by the inverter might be ineffective.

1. Main components

Main components


- 01 Negative grounding board
- 02 Negative pole connection cable
- 03 Wiring signals
- 04 Wiring connector signals

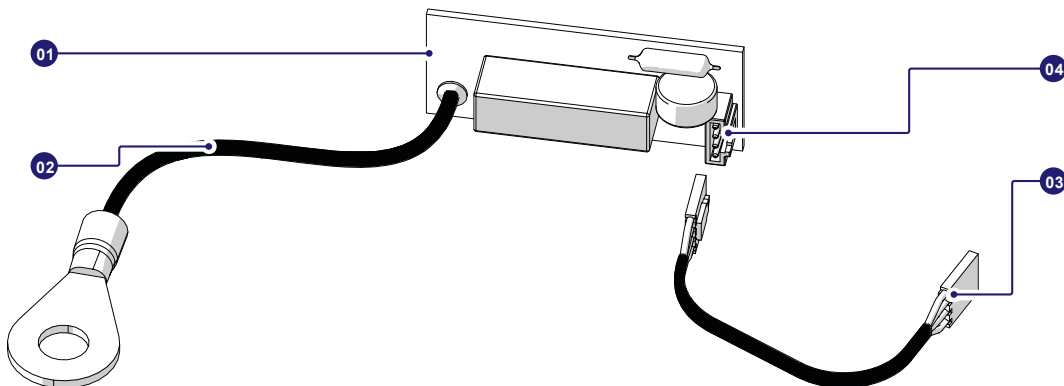

2. Supplied component list


Components available in the kit

Quantity

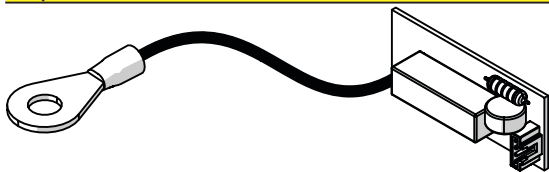

Negative grounding board

1

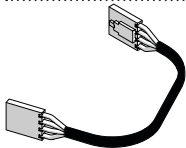

Wiring signals


1



WARNING!

THIS INVERTER INCLUDES PVS-50.0/NO.0-GROUNDING KIT.
INVERTER NOT PROVIDED WITH FULL PROTECTION AGAINST SHOCK HAZARD.
THIS INVERTER MUST BE INSTALLED AND OPERATED IN RESTRICTED AREAS (ACCESS LIMITED TO QUALIFIED PERSONNEL).
PLEASE REFER TO THE INSTALLATION GUIDE FOR MORE DETAILS.

Warning label



Quick Installation Guide

3. Assembly instructions

⚠ **WARNING** – Access to the zones inside the inverter must be carried out with the equipment disconnected from the network and from the photovoltaic generator. Isolate the inverter by externally disconnecting the AC voltage and DC voltage as well as any voltage connected to multifunction relays. Opening only the DC switches inside the inverter does not permit to operate in safe way considering that some internal parts may remain at hazardous voltages.

⚠ **ATTENTION** – When the PVS-50.0/60.0-GROUNDING KIT is assembled in one or more inverters connected in parallel to the same transformer winding:

1. the inverters and the PV Array must be installed in Closed Electrical Operating Areas where the access is restricted to instructed persons.

The above is required because the below listed protections against electrical shock hazard on the PV arrays are not included inside inverter or do not operate when grounding-kit is installed:

- Array insulation resistance detection for functionally grounded arrays
- Protection by application of Residual Current Devices
- Residual current monitoring for sudden changes

The following forms of shock hazard protections are provided integral to the inverter:

- Continuous residual current to ground

2. the maximum current flowing to earth, in case of ground fault on the DC side of the plant will be less than $N \times 500\text{mA}$ (PVS-50-TL) or $N \times 600\text{mA}$ (PVS-60-TL) where N is the number of inverters connected to the same transformer winding. This current value must be considered to size the wires and to evaluate the risk of fire.

⚠ **ATTENTION** – The earth protection circuit (PE) of the PV plant must have the same potential of the earth protection circuit (PE) of the building (in case of roof-top installation).

⚠ **WARNING** – The extraneous conductive parts of the building and the earthed conductive parts of the plant must not be accessible simultaneously.


⚠ **ATTENTION** – It is not recommended to use the grounding kit in buildings with high risk of fire.

⚠ **WARNING** – It is not recommended to use the grounding kit in buildings with LPS (lightning protection systems) to avoid potential differences among different earthed conductive parts of the PV plant that people can touch. Restricted access to PV plant reduces this hazard.


The GROUNDING KIT must be installed inside the wiring compartment.

• Open the front cover.


• Install the grounding board on the holder positioned on the lower side of the communication and control card (area highlighted in the figure to the side).

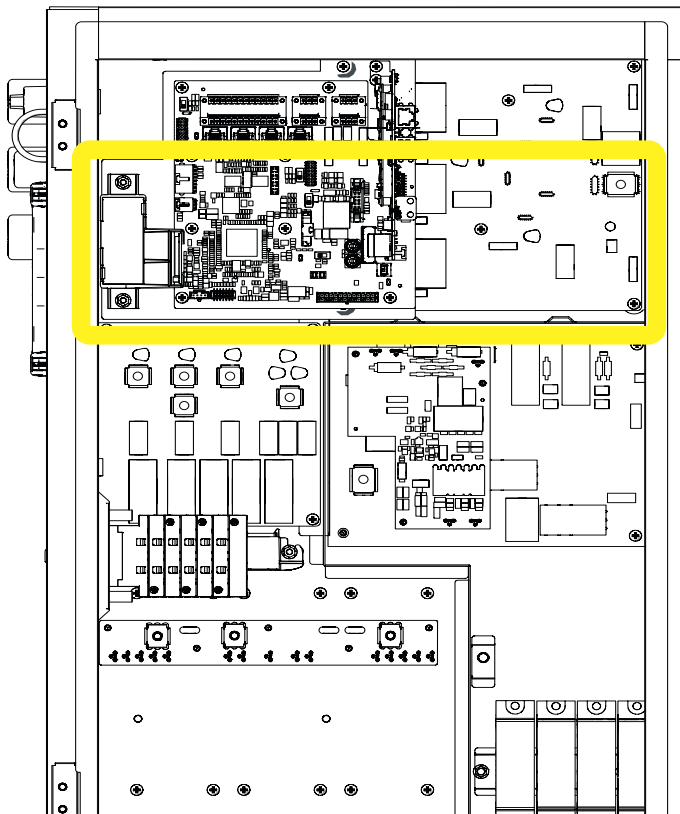


- Press down lightly on both sides of the board until two holding clips will secure the board to the support and connect the wiring signals:

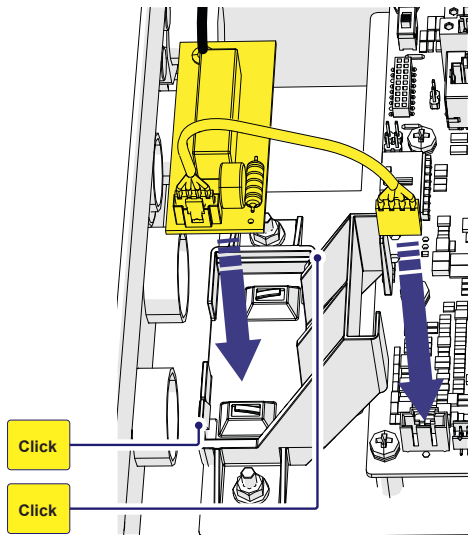

- Connect the negative pole connection cable (as in the illustration).

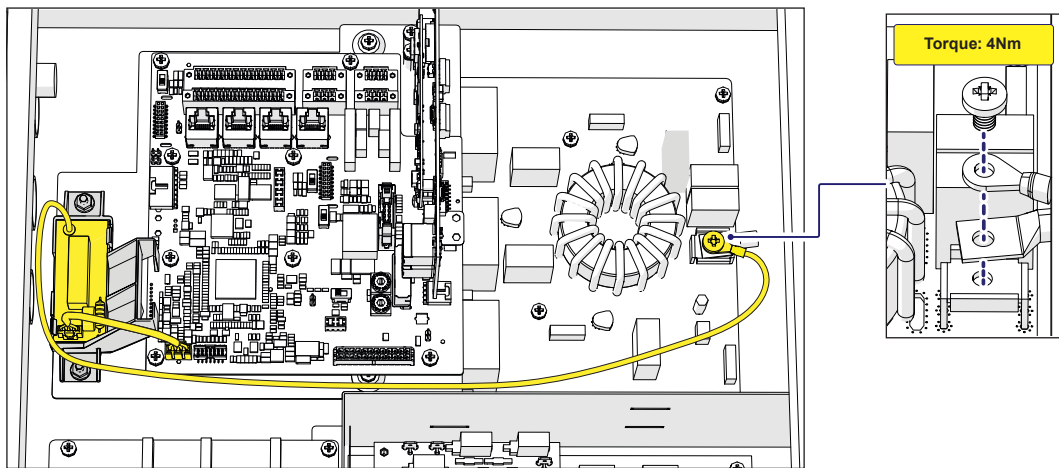

- Apply the Warning Label in the right side of the inverter (close to the other labels).

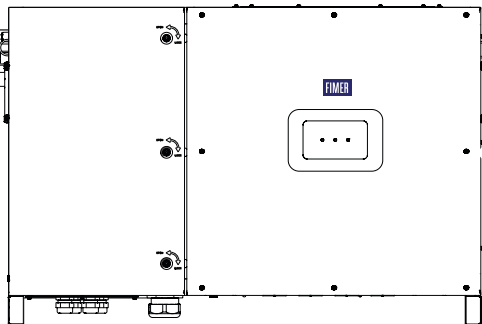

⚠ WARNING! ⚠

THIS INVERTER INCLUDES PVS-50.0/60.0-GROUNDING KIT.
 INVERTER NOT PROVIDED WITH FULL PROTECTION AGAINST SHOCK HAZARD.

THIS INVERTER MUST BE INSTALLED AND OPERATED IN RESTRICTED AREAS (ACCESS LIMITED TO QUALIFIED PERSONNEL).

PLEASE REFER TO THE INSTALLATION GUIDE FOR MORE DETAILS.

4. Grounding Kit enable via Web User Interface


After commissioning the unit it is necessary to enable the GROUNDING KIT entering in the Web UI using the administrator account generated during the previous commissioning procedure.

Enter the Menu: Setting/Additional Function and:

- Set as ENABLED the Grounding Kit with the proper selector.
- Set the "Max Vdc-/gnd for Grounding Kit" (range: 0...200V); recommended value: 120V.

This parameter identifies the threshold Voltage between negative pole and ground, which triggers the inverter disconnection for Ground fault (E037).

See the picture below:

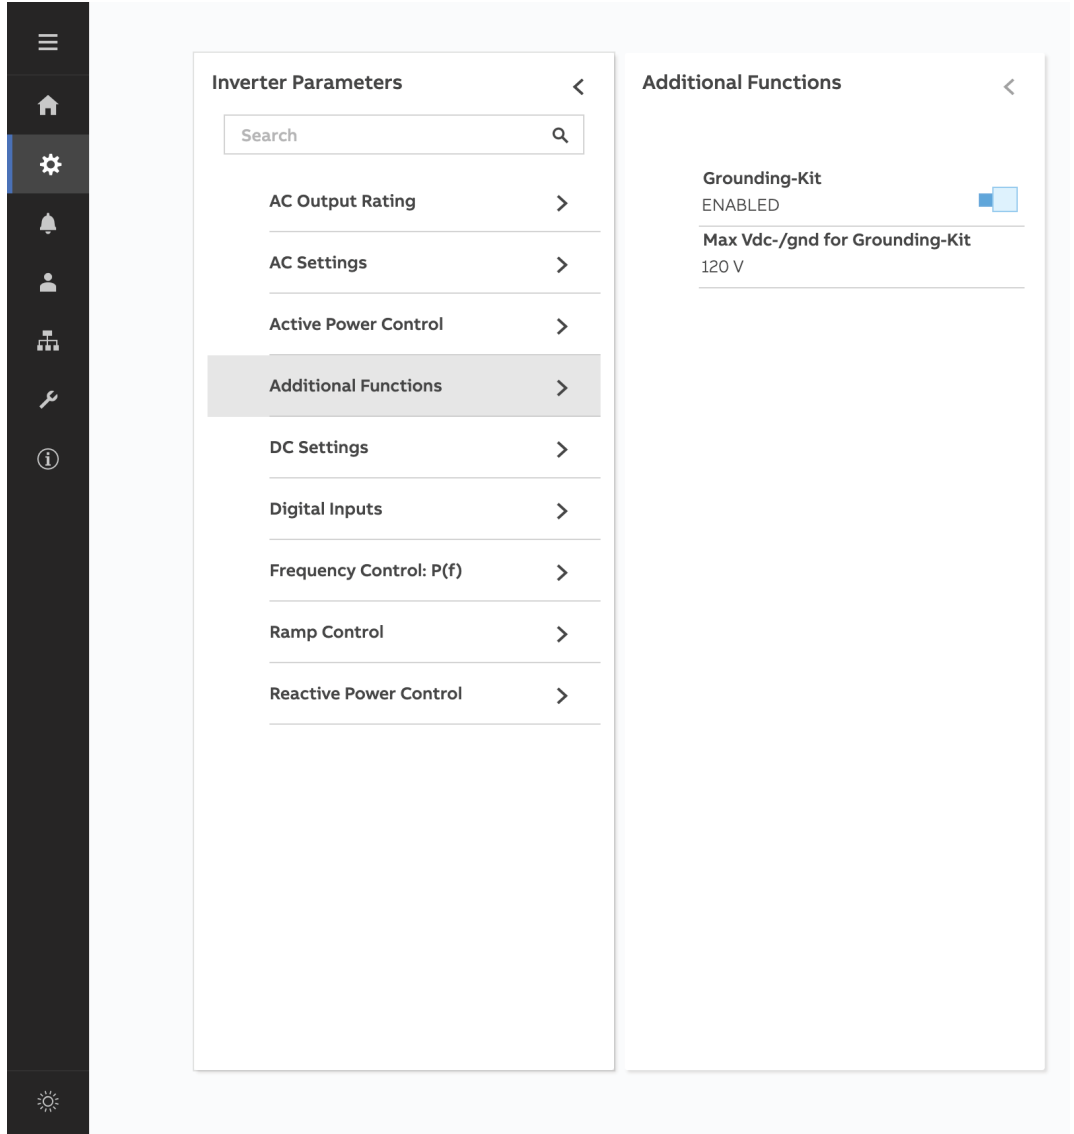

After the previous setting, in the Menu Home/Additional Functions will compare the statement "Grounding-kit enabled".

In the Menu Home /GF interface subsection the following parameters are described:

- a) Vneg-gnd → Voltage between negative pole and ground
- b) Vpos-gnd → Voltage between positive pole and ground

See the picture below:

The screenshot displays a monitoring interface with a dark sidebar on the left containing navigation icons (home, settings, notifications, user, structure, tools, info, and a sun icon). The main content area is divided into several panels:

- Channel 2**: A header for the main data section.
- Energies** (May 21, 2019 8:16:19 AM): A table showing active energy consumption over different periods.

Period	Value	Unit
Today	0.00	kWh
Last 7 days	0.00	kWh
Last 30 days	0.00	kWh
Last 365 days	0.00	kWh
Lifetime	0.00	kWh
- GF interface** (May 21, 2019 8:16:19 AM): A table showing ground fault parameters.

Vgrnd L3-L1	0.00	V
Ileak inv	3.11	mA
R-iso	0.000	MΩ
Vneg-gnd	0.00	V
Vpos-gnd	0.00	V
- Temperature** (May 21, 2019 8:16:19 AM): A table showing temperatures from various probes.

Probe	Value	Unit
Sys probe	28.96	°C
AC probe	-40.00	°C
DC probe	-40.00	°C
External te...	-39.48	°C
- Additional Functions** (May 21, 2019 8:16:19 AM): A table showing the status of the grounding kit.

Grounding-Kit	enabled
---------------	---------

5. Technical data

Grounding kit

Compatibility Three-phase inverter models: PVS-50.0/60.0-TL

Type of grounding Resistive

Pole connected to the Ground/Earth Negative

System requirements

Isolating transformer Mandatory ¹⁾

Configuration of the isolating transformer -IT System-
Delta or wye configuration on the inverter side, can be used, but transformer poles, including star center point (neutral), cannot be connected/referred to ground

Configuration of the photovoltaic strings If the system has multiple inverters connected to the same transformer, all strings must be of the same panel type, number of panels in series and orientation.

Maximum number of inverters that can be connected in parallel on a single winding of transformer:

Nominal power of the transformer	1000 kVA	1250 kVA	1600 kVA	2000 kVA	2500 kVA
Maximum number of PVS-50-TL	20	25	32	40	N.A.
Maximum number of PVS-60-TL	17	21	27	33	40

1. NOT SUITABLE for single-or multi-inverter systems that are directly connected to the low voltage network.

The features that are not specifically mentioned in this data sheet are not included in the product



For more information
please contact your
local FIMER
representative or visit:

fimer.com

FIMER_PVS-50.0_60.0-Grounding Kit-Quick Installation Guide-EN- RevB

08-02-2021

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. FIMER does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of FIMER. Copyright© 2020 FIMER. All rights reserved.